

INSTALLATION, OPERATION & MAINTENANCE PROCEDURE

EXHAUST HEAD

The Penn Cyclone Exhaust Head is an integrally welded vessel with no moving or replaceable parts. Therefore, no regularly scheduled maintenance is required except periodic inspection of the painted surface. Adapt the exhaust line to match up to the Exhaust Head inlet size. Install in a vertical position and supply piping with supports as may be required. The drain should be piped with the same size piping as Exhaust Head drain to a point of safe discharge. The operating procedure is quite simple. The Exhaust Head is built to handle almost all blowoff procedures that are within the rated flow for that size Exhaust Head.



Warning: Penn Exhaust Heads can contain and emit hot air/ condensate discharge into the atmosphere. Caution should be used when working around these vessels.

