

## ADJUSTMENTS AND SERVICING

### ***STERLCO 56-T* Temperature Actuated Regulating Valve**

To decrease flow or raise temperature (reduce water consumption) turn adjusting cup clockwise. To increase flow or lower temperature turn adjusting cup counterclockwise . After making adjustments give the regulator time to adjust itself against temperature change. To remove adjusting cup remove retainer ring.

The Type 56-T valve may be flushed manually after installation to remove dirt and grit from the line. To flush valve, place sturdy a screwdriver on top of push plate and spring assembly. (Opening in lower housing provides ample room to insert screwdriver). Compress and release spring assembly several times.

